

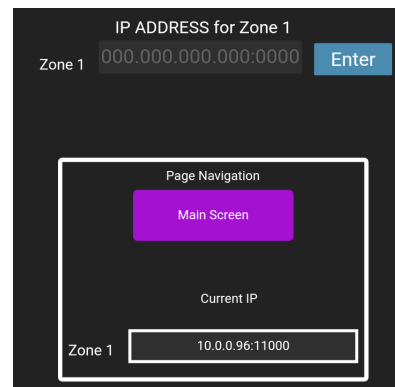


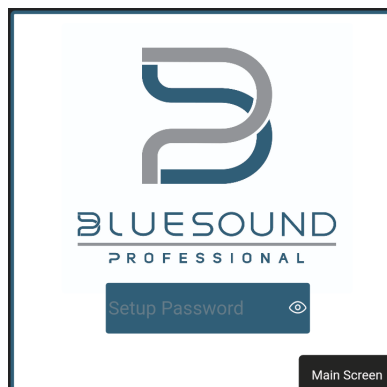


CP200 1 Zone Quick Start Manual

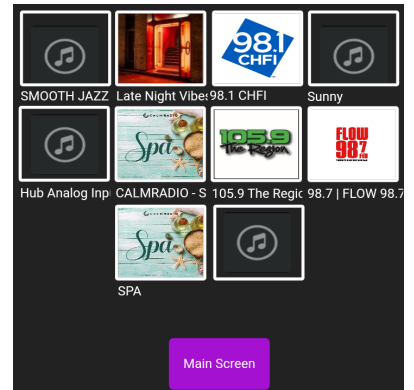

Quick Start – Windows PC

Note:
This manual's purpose is to explain how to quick start this sample design.
Changes to design will be explained during Technical Webinar and more in- depth manuals.

1. Download Easy Accomplish .exe from Bluesound Pro Web Page.
2. Download 1 zone Sample folder
3. Connect CP200 (TSO4P) using PoE to same subnet as PC
4. Open Easy Accomplish .exe File (PC only)
5. Open1Zone.ea file from folder.

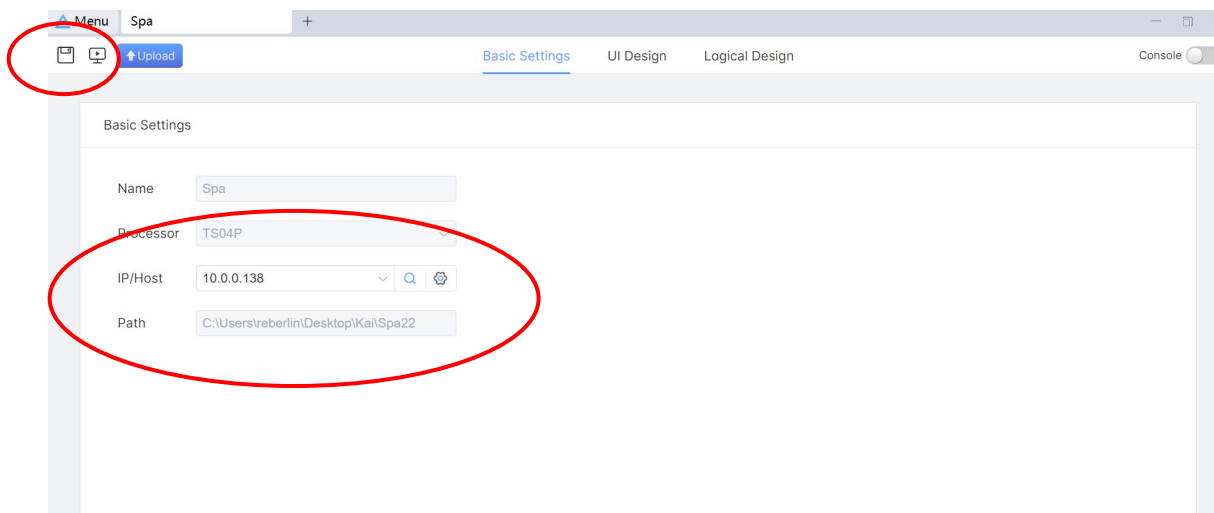


- Search for IP of TS04P touchscreen
- Select discovered device and “Save”

Now Select UI Design Tab

UI Design

There are 5 pages to the UI Design.

Double Click on “Home Page” or “control screen to access after selecting UI Design tab.

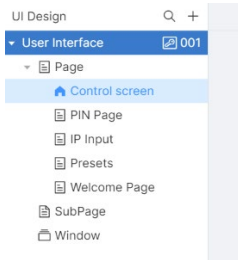


12 components in this UI Design on Control Screen.

1. Device Name
2. Service Icon
3. Service Name
4. Progress bar and Times
5. Title 1
6. Title 2
7. Volume Slider
8. Mute On/Off
9. Preset Page
10. Play/Pause
11. IP Configuration



Now Select *Logical Design* Tab

Presets

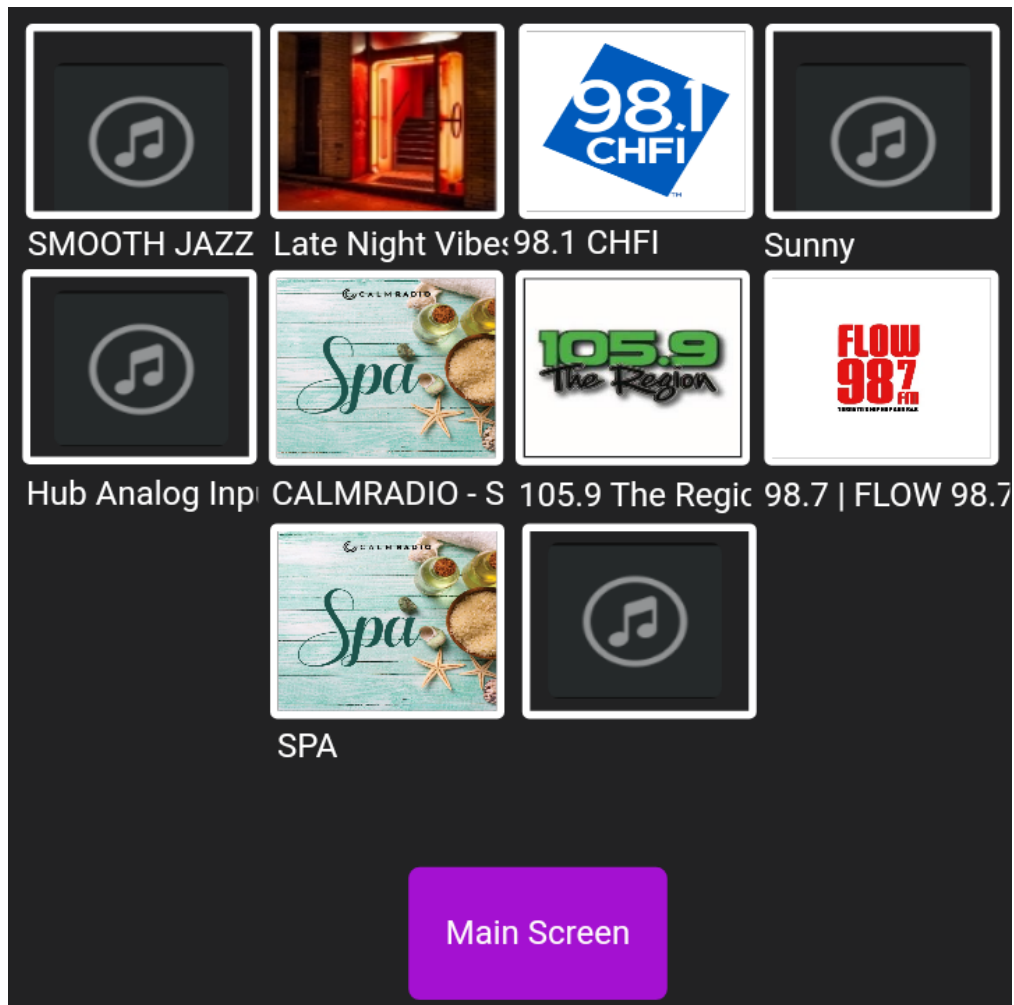


Presets are automatically populated from what you set in Bluesound Controller app for this device.

When you select a Preset, a green dot will appear in top left of Preset box, to show selection. Some music services do not have image for Preset

Configuration Access



Default is “1234”, you should edit in Easy Accomplish Config software

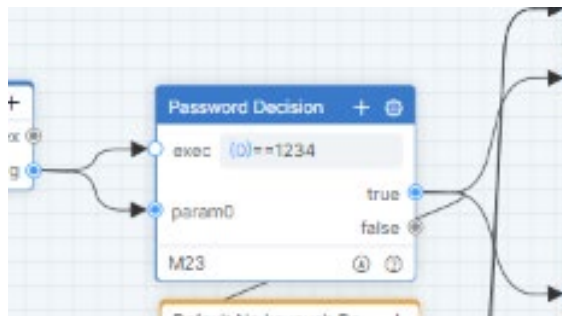

Box M23, click on “wheel” and change 4 digit number.

IP Entry page

The screenshot shows a dark-themed interface for entering an IP address. At the top, the text "IP ADDRESS for Zone 1" is displayed. Below it, a text input field labeled "Zone 1" contains the placeholder text "000.000.000.000:0000". To the right of this field is a blue button labeled "Enter". Below these elements is a white-bordered box containing a "Page Navigation" section with a purple button labeled "Main Screen". Underneath the navigation box, the text "Current IP" is shown. At the bottom, another text input field labeled "Zone 1" displays the IP address "10.0.0.96:11000".

1. Zone 1

IP ADDRESS for Zone 1

000.000.000.000:0000

Enter

2

Page Navigation

Main Screen

3

Current IP

Zone 1

10.0.0.96:11000

4

1. Enter IP address of device, IPADDRESS:11000

NOTE: For B400S – IPADDRESS:11000 for Zone 1, IPADDRESS:11010 for Zone 2,
IPADDRESS:11020 for Zone 3, IPADDRESS:11030 for Zone 4


2. Then press ENTER

3. To navigate back to control screen


4. Display of entered IP address. Make sure it is correct including Port# before leaving this page

Logical Design


Preset Indicator

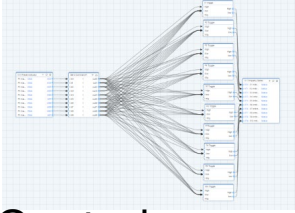


Control

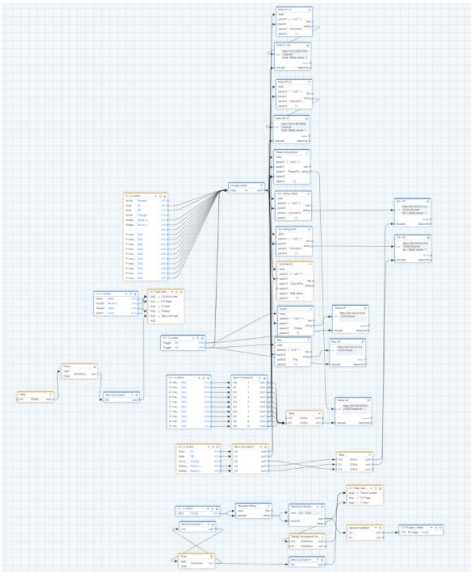

Volume Slider

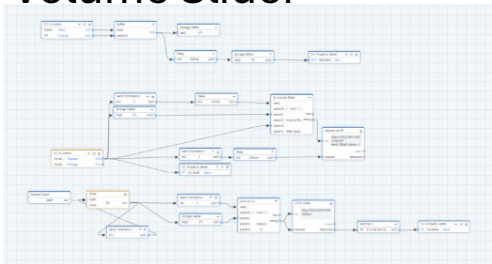

Album Art

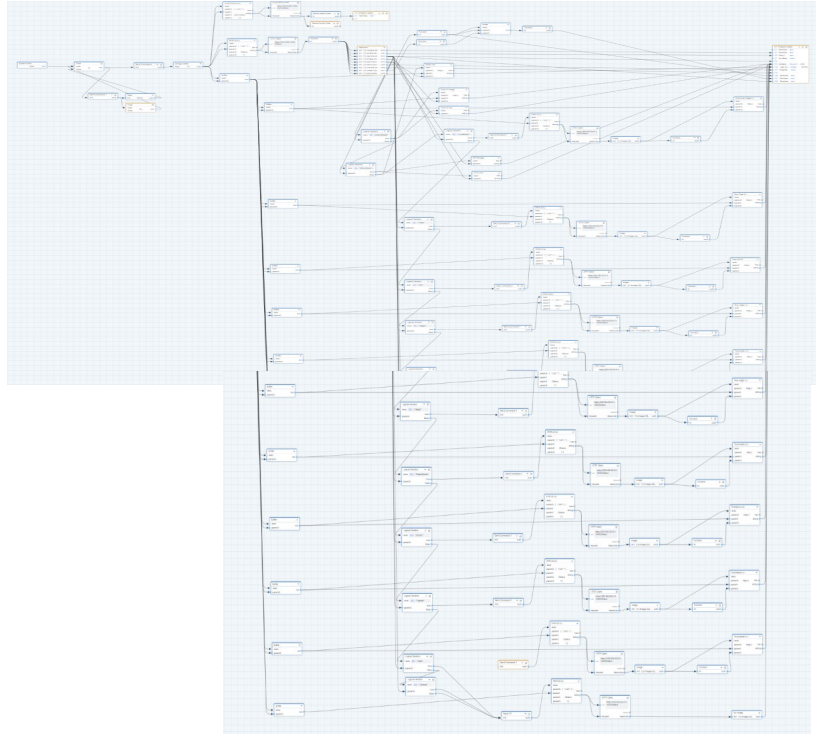

Click on screen and scroll to find design. Once at design click on screen.
Hold CNTRL button on keyboard and using mouse scroll in or out to zoom in or out

Note:

Design is repeated for each control screen for a total of 4.

1. Save project
2. Upload to CP200.

Ready To Go!!

